

Events By Eagle

1327 North Reading Road ~ Stevens ~ PA ~ 17578

Phone: 717.336.0777 ~ Fax: 717.336.0975

www.eventsbyeagle.com

Cotton Candy Machine



Pre-Operating Instructions

Before starting motor make sure plastic netting is clipped into place on the inside of the silver bowl. Also moisten the inside of the bowl to keep the floss from sticking.

Operating Instructions

Plug machine in. Flip main power, motor and heat switch to the “ON” position. With motor running, fill floss head about 90% full. **DO NOT OVER FILL! NEVER ADD SUGAR WHEN MOTOR IS NOT RUNNING.** Turn heat control knob in the clockwise position to maximum setting. This will heat up quicker and produce the floss in a few seconds. Once it is heated it will start to smoke. Adjust heat control knob in a counter clockwise direction to eliminate the smoke. **NEVER OPERATE THE MACHINE FOR PROLONGED PERIODS WITH THE HEAT CONTROL ON HIGH WHERE IT CAN CAUSE BURNING SUGAR OR SMOKE.** Once you find the ideal setting for the heat control knob you should be able to operate near this position each time you operate the machine.

Transportation

When transporting the machine make sure the **SCREWS ARE DOWN TIGHT**. When making the cotton candy make sure the **SCREWS ARE UP** so the motor can move.

Clean- Up

Dump the excess sugar out of the head. **DO NOT CLEAN MACHINE!** Only clean bowl and dome with hot soapy water.

