

Events By Eagle

1327 North Reading Road ~ Stevens ~ PA ~ 17578
Phone: 717.336.0777 ~ Fax: 717.336.0975

Helium Tank With Valve Instruction Sheet

*** IT'S IMPORTANT TO REMEMBER: All standard 11 inch balloons
will only stay up for 12-18 hrs.

WHEN USING HELIUM TANK WITH VALVE:

1. Remove outside lid
2. Make sure valve is CLOSED
3. Insert valve into opening next to screw wheel
4. Tighten with wrench (optional for valves that are hand tightened)
5. Open valve far enough to let helium out
6. Place balloon end over valve and push with thumb
7. Remove and tie
8. If using sealing disks put the disks on the stick first then fold balloon end over the stick and slide the disk over the balloon end

WHEN FINISHED WITH TANK:

*** IMPORTANT TO REMEMBER: Always close valve all the way before
removing helium tank

1. Release pressure by pushing valve that fills balloon
2. Un-tighten valve hand or wrench
3. Remove valve