

Events By Eagle

1327 North Reading Road ~ Stevens ~ PA ~ 17578
Phone: 717.336.0777 ~ Fax: 717.336.0975

Spin Art



Controls and Their Functions

On the rear panel near the power cord is the main power **ON/OFF** switch. A second switch is activated when the lid is in the down position. During normal operation, the main power switch should be in the **ON** position. Opening and closing the lid will start and stop the paper tray from spinning. **CAUTION!** – Remember to turn the main power switch to **OFF** before unplugging the machine.

Creating Art Work

Before turning the main power switch **ON**, be sure the corrugated liner is in place around the inside of the bowl. This will absorb most of the excess paint and minimize clean-up at the end of the day. To create art work place the 5 x 7 card stock in the paper tray being sure the edges of the paper are within the tray edges. Then close the lid to make the tray start spinning. Then Squeeze small drops or lines of paint onto the card stock through the slot in the lid. Multiple colors of paint may be used and are recommended for the best pictures. When your picture is finished open the lid and wait for the tray to come to a complete stop before removing your art work.

Clean-Up

Unplug machine then remove corrugated liner. Wipe down machine and clean all paint off with hot soapy water. Do not submerge any part of the machine. If machine is returned dirty there will be a cleaning charge.