

Events By Eagle

1327 North Reading Road ~ Stevens ~ PA ~ 17578
Phone: 717.336.0777 ~ Fax: 717.336.0975

Popcorn Machine



Controls and their functions

There are three switches on the popper

1. Light and Warmer – Turns on the heat to the bottom corn pan and heat light
2. Kettle Motor – Turns on the motor which drives kettle agitator shaft.
3. Kettle Heat – Turns on the heat element

Popcorn Quantities

If using All in One Popcorn the machine will only do one packet at a time.

If using bags of popcorn and oil bars use:

Popcorn- 8 oz.

Oil Bar- ½ oil bar

Flavorcol- 1 teaspoon or to taste

Popping Instructions

1. Turn KETTLE HEAT and KETTLE MOTOR switch ON.
2. Make test pop with 3 kernels of corn and 1 oz. of oil.
3. Load pre-measured popcorn and oil into kettle.
4. When corn has popped dump kettle.
5. Repeat cycle starting with step #3; always pop 3-5 batches for best popcorn.

Care and Cleaning

Each time you finish a series of popping, wipe the outside of the kettle with a soft cloth to remove any oil drippings on the outside of the kettle. After you are finished popping for the day UNPLUG MACHINE allow kettle to cool until it is not too hot to handle, but still warm. Unplug kettle and remove it form machine. Clean kettle with hot soapy water but do not submerge kettle in water. Clean the rest of the machine with hot soapy water as well. NEVER use glass or plastic cleaners to clean machine. Be sure to clean well or else a cleaning charge will apply.

